



Jaguar XK8 Wind Deflector Installation Manual 1996-2006

Tools required:

- Phillips screw driver
- 12mm Drill bit
- Ratchet and 45 Torx socket
- 9mm Deep socket

Parts supplied:

- 1 x Aperta Wind deflector
- 2 x Front installation plugs
- 2 x Rear installation brackets
- 4 x Self-tapping screws





Jaguar XK8 Wind Deflector Installation Manual 1996-2006






Jaguar XK8 Wind Deflector Installation Manual 1996-2006



Jaguar XK8 Wind Deflector Installation Manual 1996-2006

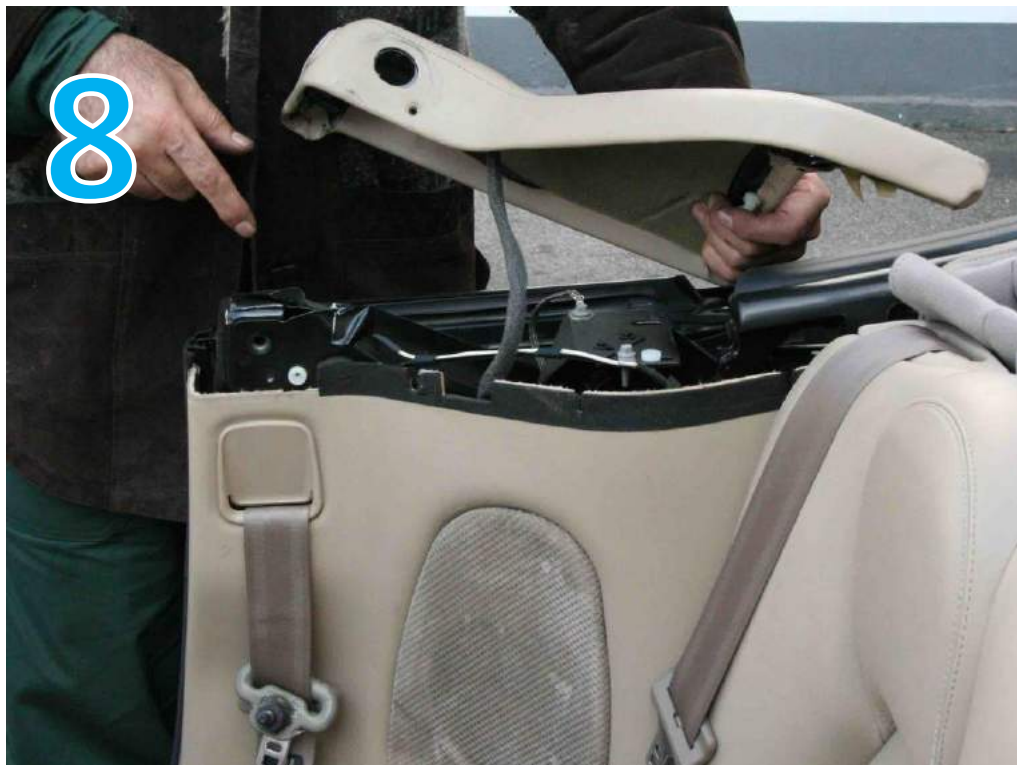



Jaguar XK8 Wind Deflector Installation Manual 1996-2006

9, 10, 11 & 12

Drill holes according to pictures and fit the front wind deflector plugs.





Jaguar XK8 Wind Deflector Installation Manual 1996-2006





Jaguar XK8 Wind Deflector Installation Manual 1996-2006



14, 15 & 15

Fit the rear brackets with the supplied self-tapping screws.
Try to push the rear seat back rest as far back as you can.





Jaguar XK8 Wind Deflector Installation Manual 1996-2006





Jaguar XK8 Wind Deflector Installation Manual 1996-2006





Jaguar XK8 Wind Deflector Installation Manual 1996-2006

